

“I have a car that came in as a load, and it will be leaving as a load. How do I make sure that the L/E status does not change when I release the car?”

The screenshot shows the ROCS software interface for 'New Traffic by Customer : Form'. The customer is ANDEROL INC, with a regular contact of Woody Stevens and phone number (973) 887-7410. The interface displays a table of car status records with columns for Status, Car Number, Type, Location, Spot, Move To, Spot L/E, Inb RR, O/B, O/B RR, WB Date, IC Date In, Time In, Store Date & Time, and Other Info. A yellow box highlights the 'OB' column in the table, with a callout label 'OB Load Status' pointing to it.

Status	Car Number	Type	Location	Spot	Move To	Spot L/E	Inb RR	O/B	O/B RR	WB Date	IC Date In	Time In	Store Date & Time	Other Info	
At Patron	UTLX 645345	T XMR	Anderol - Upper	1		L	CSXT		CSXT	10/13/08	11/07/08	11:30			
	UMLER	Info	IB OB	OB Bill	1251	914	11/19/08	11/21/08	12:30	11/21/08	12:30	0:00	0:00		
At Patron	UTLX 670250	T XMR	Anderol - Upper	2		L	CSXT		CSXT	10/17/08	11/07/08	11:30			
	UMLER	Info	IB OB	OB Bill	1251	914	11/19/08	11/21/08	12:30	11/21/08	12:30	0:00	0:00		
At Patron	UTLX 76228	T XMR	Anderol - Upper	3		L	CSXT		CSXT	09/30/08	10/22/08	12:30			
	UMLER	Info	IB OB	OB Bill	1634	1518	10/23/08	10/27/08	7:56	10/27/08	7:56	0:00	0:00		
At Patron	UTLX 670295	T XMR	Anderol - Upper	4		L	CSXT		CSXT	09/22/08	10/22/08	12:30			
	UMLER	Info	IB OB	OB Bill	1634	1518	10/24/08	10/27/08	7:56	10/27/08	7:56	0:00	0:00		
Released - Pulled	UTLX 670321	T XMR	Standard Roofing	1	SK	E	CSXT		CSXT	12/26/07	01/18/08	12:15		SHOP	
	UMLER	Info	IB OB	OB Bill	8306	7731	02/08/08	02/11/08	11:30	02/11/08	11:30	03/10/08	14:33	03/12/08	11:50
Waiting to Place	UTLX 670264	T XMR	Morristown Runaround	1		O	L	CSXT		CSXT	11/12/08	12/18/08	7:00		
	UMLER	Info	IB OB	OB Bill	271							0:00	0:00	0:00	
Waiting to Place	UTLX 670252	T XMR	Suburban Propane	2		O	L	CSXT		CSXT	09/22/08	10/22/08	12:30		
	UMLER	Info	IB OB	OB Bill	1634							0:00	0:00	0:00	

For each car on the Customer Status screen, there is a box in between the inbound and outbound railroads. If you click on the box, the word YES will appear, and the box will change color to magenta. If the inbound L/E status for a car is L, the outbound status will be L when the car is released and the box is set to YES. If the inbound status is E and the box is set to YES the outbound L/E status will be set to L when the car is released. If the L/E status is L, and the OB box is blank, then the status will change to E when the car is released. Likewise, if the car has an inbound L/E status of E and the OB box is left blank, the L/E status will remain E when the car is released.